

TITLE: Packaging the GERBER EDGE® for Shipment for Serial Number 665xxx through 669xxx

Category: Printing/Imaging – Gerber EDGE – Service/Support

Gerber FastFact #: 2011

Supplied by: Technical Hardware Support

Last Reviewed: 2/21/03

Summary: This document provides you with instructions for packaging the GERBER EDGE for shipment. This document applies **only** to Classic and Trunnion Edges with Serial Number 665xxx through 669xxx.


Underlined text indicates change from the previous document.

The EDGE® is shipped from the factory in reusable packaging materials. These packaging materials are specially designed to protect your EDGE when it is being transported to and from your location. If you do not have the original packaging materials shown below, please call your distributor or the Gerber Field Service Department at: 800-828-5406 (USA and Canada); 860-643-1515 (International); or 860-648-8376 (fax).

In addition to the original packing materials, you need strapping material to secure the boxed EDGE to the shipping skid. If you do not have access to strapping materials and buckles, please call your distributor or the Gerber Field Service Department for advice.

WARNING: Two people are required to lift or move the EDGE. It weighs approximately 140 pounds (63.5 kilograms) packaged for shipment and 90 pounds (40.8 kilograms) unpacked.

1. Install the clear rubber vibration dampers over the cam followers located on either side of the printhead on the head support mount. Carefully close the cover.
2. Put the bottom cover on the wooden shipping skid, then put the cushion base with the foam blocks inside the bottom cover.
3. Put the wooden mounting platform inside the cushion base.
4. Slide the two mounting brackets inside the base bracket as shown in the illustration.
5. Put the EDGE on the mounting platform with the keypad end of the machine toward the "Keypad End" label on the mounting platform.
6. Bolt the mounting brackets to the mounting platform

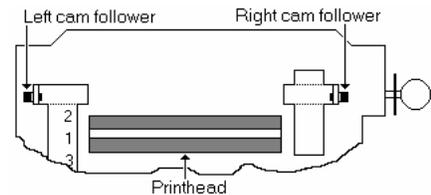

with four bolts, four flat washers, and four lock washers. The flat washers are against the mounting bracket followed by the lock washers which are against the bottom head of the bolt.

7. Spread the plastic bag over the top of the EDGE.
8. Slide the tri-wall inner sleeve down over the EDGE making certain it touches the mounting platform.
9. Put the accessory tray on top of the inner sleeve with the folded flaps of the tray outside the inner sleeve.
10. Slide the double-wall outer sleeve down over the accessory tray and past the cushion base, making certain it touches the inside of the bottom cover.
11. Put the top cover over the outer sleeve.
12. Strap the boxed EDGE tightly to the shipping skid.

